


Hole positions on sides and legs

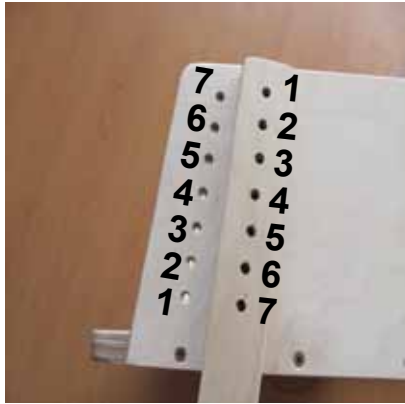

Hole positions, height of seat plane and arm rest with 40 cm legs

small chair with 40 cm legs

hole	seat plane	arm rest
1-7	24	40
1-6	26	42
1-5	28	44
1-4	30	46
1-3	32	48

Assembly

Turn the chair body on its side. Put the carriage bolt into the hole, with its shank sticking outward. Hit in the screw all the way - its brim should lean against the inner side. Place an underlay on each screw shank, between the two lacquered wood surfaces, to prevent them from sticking to each other (in a few weeks you may disregard the underlays). Insert the leg and fasten it with a bolt. Fasten the thread but not too tight. Repeat the procedure with the legs on the other side, then set the chair on its legs. Move the chair a little bit to adjust it and prevent it from wobbling, then tighten the threads.

Assembly of accessories: For foot rest and adjustable arm rest – see above fastening procedure. Make sure you use the underlays. If the chair is equipped with foot rest, make sure you put the pair of legs including holes for footrest in the front. Carriage bolts needed for accessories: 6*70 (2 pcs): foot rest // 6*45 (4 pcs): adjustable arm rest // 6*40 (2 pcs): tray

Inclining the chair: Leave the bottom bolt of the front leg. Incline the seat plane and fasten the leg in the desired position. In case of small size chair equipped with tray, the last hole should not be used for inclining (the adjustable armrest could not be set in a fully horizontal position).

